

User manual

Instrukcja obsługi

AVS240KT

AVS245K

English. 2

Polski 8

Thank you for choosing AVEL TV! Before using and installing the product, please read this guide.

Please keep this manual for future reference.

The information in this manual is subject to change without prior notice.



Warnings



To reduce the risk of fire, electric shock and other injuries, keep these safety precautions in mind when installing, using and maintaining your TV. The mains outlet should be installed near the equipment, be easily accessible. The TV should be connected to a grounded GFCI protected mains outlet.

- To protect against electric shock, do not immerse the power cord, power plug or product in water or other liquid.
- Do not overload AC outlets or extension cords. Overloading can cause a fire.
- Close supervision by adults is necessary when a product is used by or near children.
- Do not operate the product with a damaged cord or plug or if it has been damaged in any manner.
- Do not let the power cord get in contact with hot surfaces.
- If you notice any smoke or scorched smell near the product, unplug the power cord and contact qualified personnel for service or repair.
- Do not use or place any combustible or flammable substances near the product.
- Do not use this product for other than intended use.
- This product is intended for indoor use only.
- For added safety, during a light storm, or when this product is left unattended and unused for a long time, unplug it from the wall outlet and disconnect LAN cable.
- Do not use detergents containing abrasives.

Accessories



Please make sure that the accessories are in the package as shown below:

1. Mounting bolts set x 2 pcs.
2. Retaining clips x 4 pcs.
3. Velcro x 2 pcs.
4. Silicone damper x 2 pcs.
5. Installation manual x 1 pcs.
6. Installation drawing x 1 pcs.
7. Prior to First Use x 1 pcs.
8. Remote control x 1 pcs.
9. Power adapter x 1 pcs.

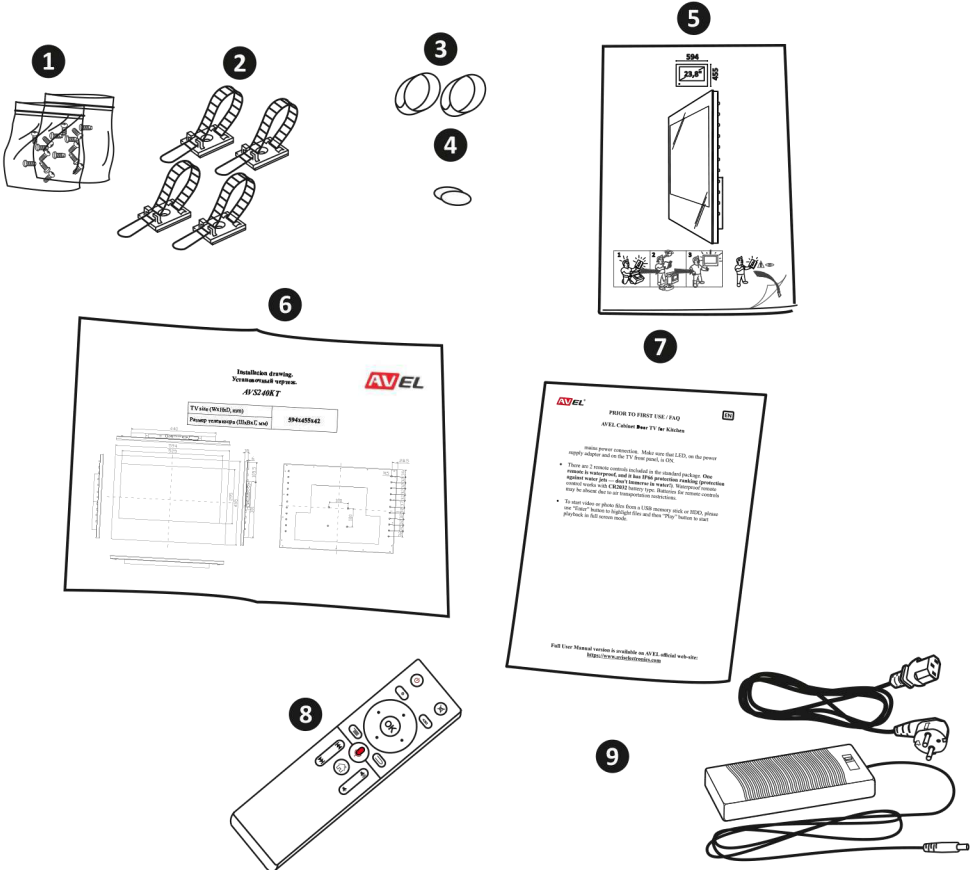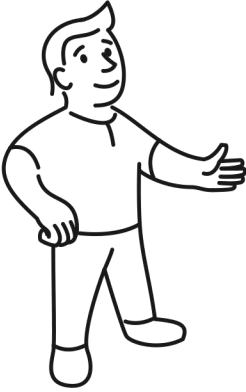

*Image is given for reference and may be different with the actual components

Inputs and Outputs

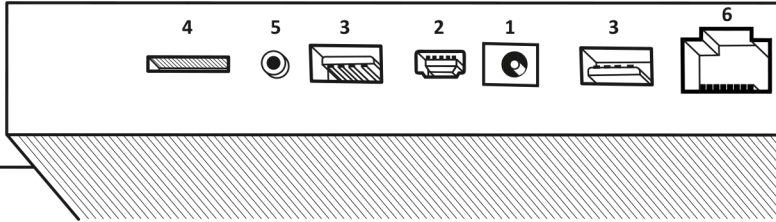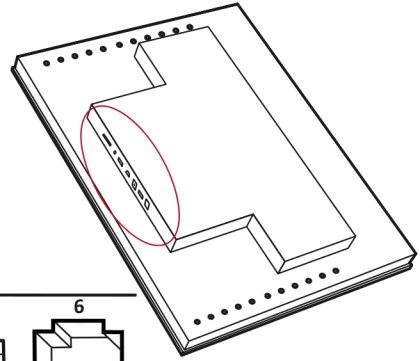

Power x 1



Mini USB x 1




USB-port x 2




SD x 1



Speaker x 1 *



LAN x 1


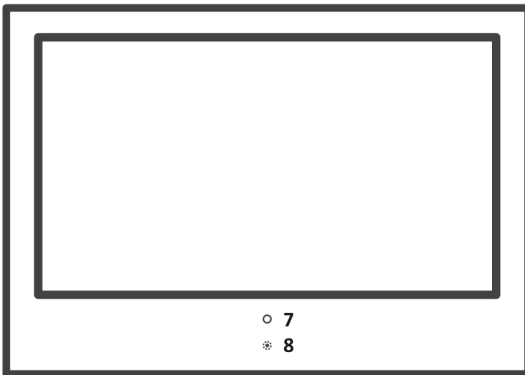


⑦ Webcam

⑧ Power ON, OFF / Indicator


* For external Speakers.

Remote control

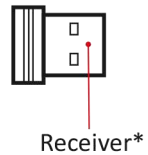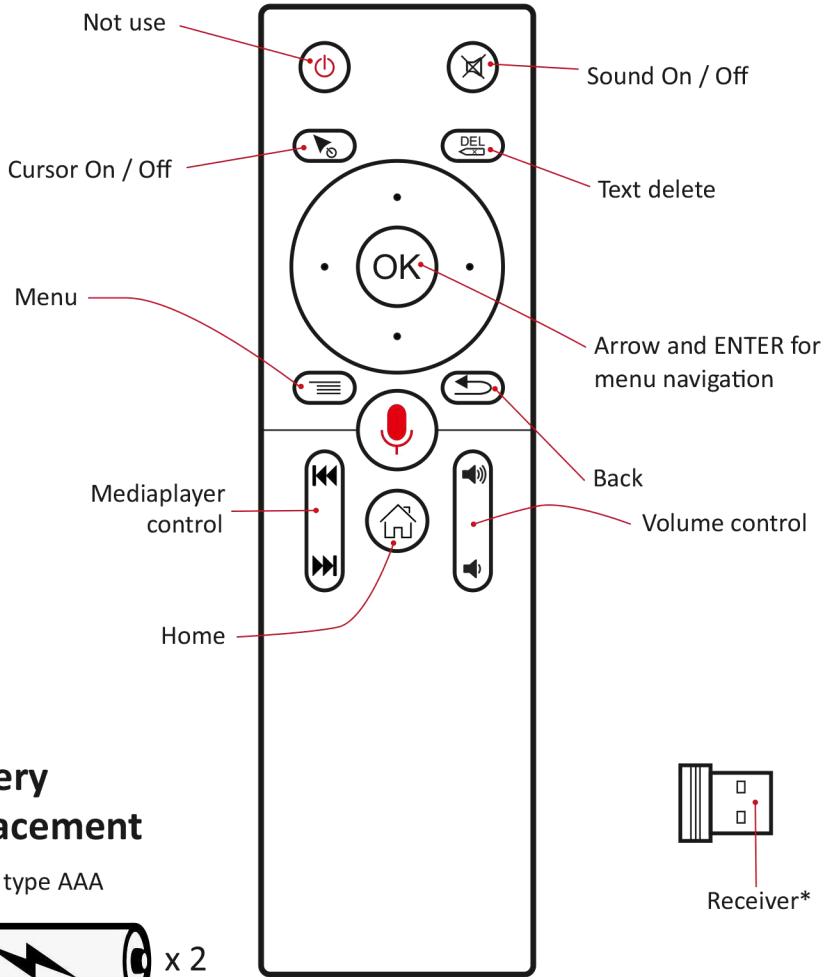


Battery replacement

Battery type AAA

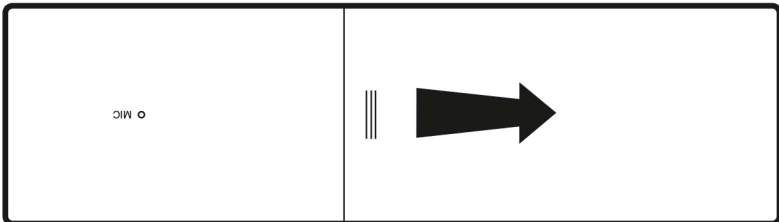

*Before using remote control, connect the receiver to USB port of TV.

Settings

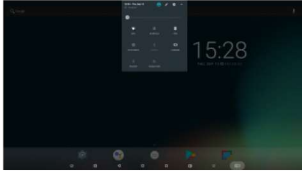

Main settings

Swipe down to see main settings menu. There are frequently used switches and screen brightness slider. Press ⚙️ to enter full settings menu.



Wi-Fi settings

Enter to setup internet wireless connection.



Display settings

Brightness setup, font size, background settings, etc.



Sound settings

System volume setup, alarm setup, APP's volume, notification sound change.




Date & time

Date & time setup.



Language setting

System language change, keyboard language setup.

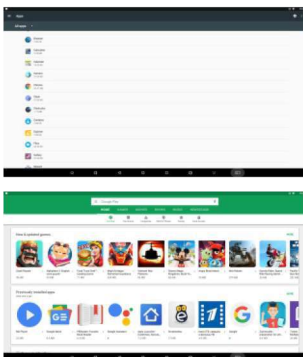

APP's settings


Delete or change APP's. To install APP's please only use Play Store 🎮.

Troubleshooting



Symptoms

Device is frozen, doesn't respond



Possible Solution

Reboot the device by power off (take out power plug).

No Wi-Fi connection



Check Wi-Fi settings if the connection is fine, have a check with internet service provider.

Dziękujemy za zakup telewizora AVEL. Przed instalacją i użytkowaniem prosimy o zapoznanie się z instrukcją.

Prosimy o zachowanie instrukcji na przyszłość.

Instrukcje mogą ulec zmianie bez wcześniejszego powiadomienia.



Ostrzeżenie



Aby uniknąć ryzyka pożaru, porażenia prądem lub innych uszkodzeń, podczas instalacji i użytkowania telewizora zachowaj środki ostrożności. Gniazdko elektryczne musi być łatwo dostępne, uziemione i podłączone do wyłącznika różnicowoprądowego (RCD).

- Aby zapobiec porażeniu prądem, trzymaj wodę z dala od gniazdka elektrycznego i kabli krosowych.
 - Nie przeciążaj sieci elektrycznej. Przeciążenie może spowodować pożar.
 - W przypadku korzystania z technologii przez dzieci wymagany jest nadzór rodzicielski.
 - Nie używaj telewizora, jeśli sam produkt lub jakkolwiek jego część jest uszkodzona, zwłaszcza okablowanie elektryczne.
 - Unikaj kontaktu przewodu zasilającego z rozgrzаныmi/gorącymi powierzchniami.
 - Jeśli zauważysz dym lub obcy zapach z telewizora, natychmiast odłącz urządzenie od sieci i skontaktuj się z centrum serwisowym.
 - Nie używaj ani nie przechowuj łatwopalnych substancji w pobliżu telewizora.
 - Używaj telewizora tylko zgodnie z jego przeznaczeniem.
 - Telewizor jest przeznaczony wyłącznie do użytku w pomieszczeniach.
 - Ze względów bezpieczeństwa odłącz telewizor od sieci i anteny na czas dłuższej nieobecności oraz podczas burzy.
 - Nie używaj detergentów zawierających substancje ściernie
-

Zawartość dostawy



Upewnij się, że Twój pakiet TV zawiera następujące elementy

1. Zestaw śrub montażowych x 2 szt.
2. Zaciski montażowe x 4 szt.
3. Opaski zaciskowe na rzep Velcro x 2 szt.
4. Tłumiki silikonowe x 2 szt.
5. Instrukcja instalacji x 1 szt.
6. Rysunek instalacyjny x 1 szt.
7. Instrukcja „Przed pierwszym użyciem” x 1 szt.
8. Pilot x 2 szt.
9. Adapter AC/DC x 1 szt.

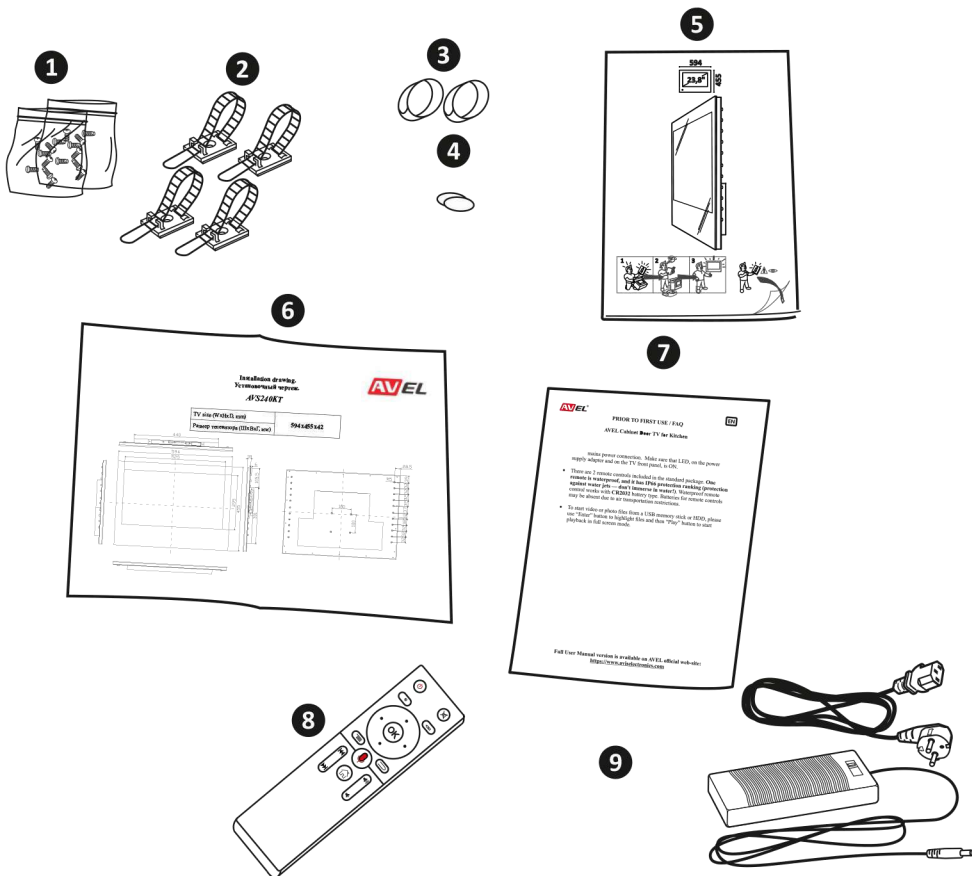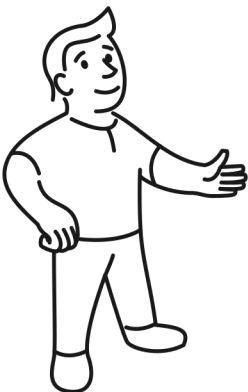

* Obrazy mogą różni się od rzeczywistego produktu.

Przełączanie

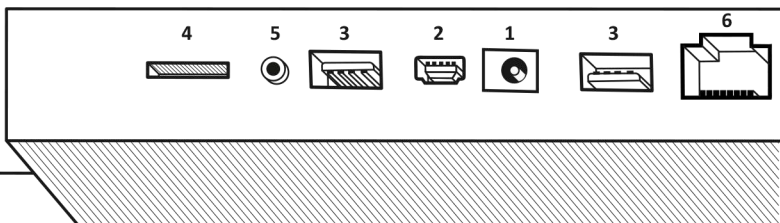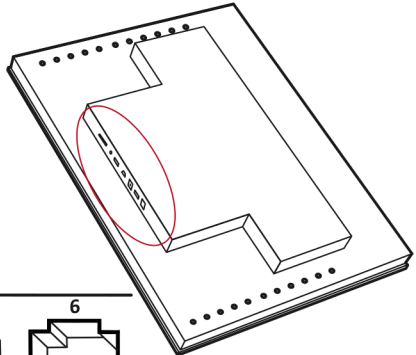

1



Power x 1

2



Mini USB x 1

3



USB-port x 2

4



SD x 1

5



Speaker x 1*

6



LAN x 1




7 Webcam

8 Zasilanie włącz / wyłącz
Wskaźnik



* dla głośników zewnętrznych

Remote control for Smart TV

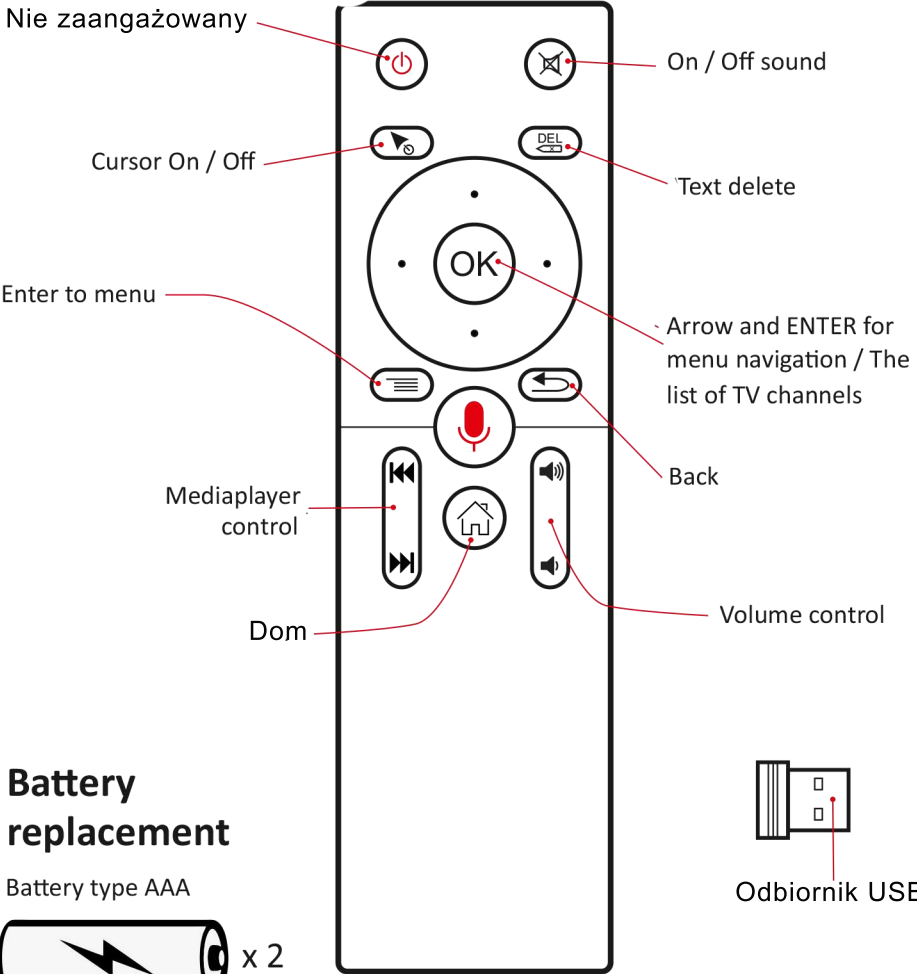


Battery replacement

Battery type AAA

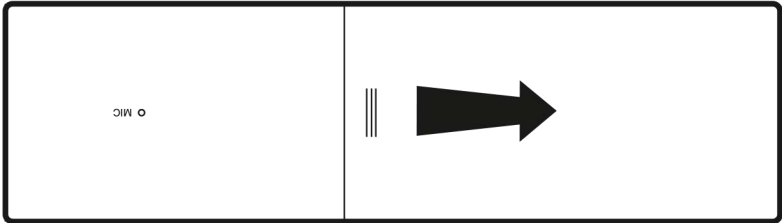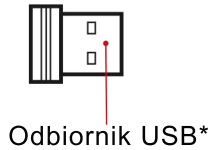


**Before using remote control, connect the receiver to USB port of TV.

Ustawienie

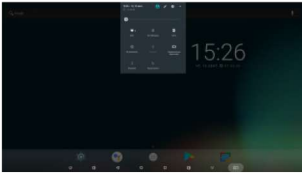

Szybkie ustawienia

Przesuń palcem w dół na ekranie, aby podnieść zasłonę. W kurtynie znajdują się przetłączniki do szybkich ustawień, a także suwak do regulacji jasności ekranu. Aby przejść do menu ustawień, naciśnij .



Konfiguracja Wi-Fi

Przeznaczony do nawiązywania połączenia z Internetem.



Konfiguracja ekranu

Zaprojektowany, aby dostosować jasność ekranu, rozmiar czcionki, ustawić tapetę, wygaszacz ekranu i inne ustawienia.



Ustawienia dźwięku

Przeznaczony do ustawiania głośności systemu, budzika i aplikacji. A także do wyboru dzwonka powiadomienia.




Ustawianie daty i czasu

Służy do ustawiania godziny i daty.




Ustawianie języka i wprowadzania

Służy do wyboru języka systemu, a także ustawiania języka wprowadzania i klawiatury.

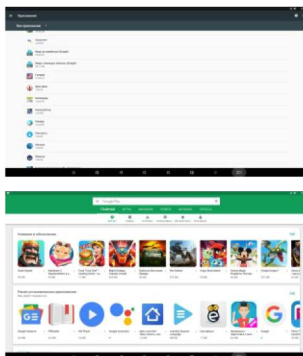

Konfiguracja aplikacji


Zaprojektowany do zmiany i usuwania aplikacji. Aby zainstalować dodatkowe aplikacje, skorzystaj ze Sklepu Play .

Rozwiązywanie problemów



Objaw

Telewizor nie reaguje na polecenia



Możliwe rozwiązanie

Uruchom ponownie urządzenie, wyłączając zasilanie sieciowe

Brak połączenia z internetem



Sprawdź połączenie Wi-Fi. Jeśli połączenie z ostatnie nawiązane, upewnij się, że usługa jest świadczona przez dostawcę.



AVIS ELECTRONICS OVERSEAS LIMITED

Manufacturer: 506-507A, HuiGu ChuangXin Technology park, JingBei road, Shiyan town , Baoan district, Shenzhen, Guangdong, China, 518108

For more details, please visit www.aviselectronics.tech

Adres prawny producenta: 506-507A, HuiGu ChuangXin Technology park, JingBei road, Shiyan town , Baoan district, Shenzhen, Guangdong, China, 518108

Importer: ILVIPL Sp.z.o.o

Adres prawny importera: 50-541 Wrocław, Aleja Armii Krajowej, 45

Więcej informacji na stronie www.aviselectronics.pl